

Advanced Diplomat Digital Lock

i NSTRUCTION

for REDL2



Quality reputed worldwide ———


diplomat **SAFE** 

www.dsafekr.com

HOW TO OPERATE *diplomat* REDL2?

1. How to open ?

- Hold the upper round part and press the opening mark with thumb and lift it up leftward to open, and load batteries. (1.5V AAA Alkaline 4pcs) Then, LED flickers with Bi Bi Bi sound.

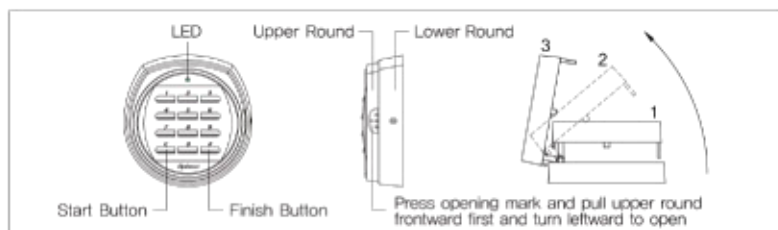

- The initial code from the factory is **①②③④**.

Step 1 : Push **ⓐ** button (LED flickers with Bi sound)

Step 2 : Push the Code buttons (LED flickers with Bi sound)

Step 3 : Push **#** button (LED flickers on with melodic tone)

Step 4 : Turn knob (or handle) clockwise and open the door while melody rings (3 seconds).

- Note : ① In case that wrong code is tried, it sounds Bi Bi Bi Bi.
② If wrong codes are tried over 5 times, the lock gets paralysed and doesn't work.

How to release the lock from paralysis?

- ▶ Enter the original code twice consecutively as in the opening procedure. (No sound but LED flickers when each button pushed, if the procedures are completed exactly, the lock recovers with melodic tone).

EX) **ⓐ①②③④# ⓐ①②③④#** (LED on, Melodic tone)

2. How to enter your personal code ?

★ 1st Code in Door opened, M > New Code >

Step 1 : Push Memory button **M** on the door back,
(LED flickers on with Bi sound)

Step 2 : Push New Code buttons
(4 digits min to 16 digits max, LED flickers on with Bi sound)

Step 3 : Push **#** button (Melodic tone)

EX) If a new code is decided 2 1 0 0, push buttons as below.

M 2 1 0 0 # (Melodic tone)

★ 2nd Code in Door opened, M > 2 > # > New Code >

Step 1 : Push Memory button **M** on the door back,
(LED flickers on with Bi sound)

Step 2 : Push **2** button (LED flickers on with Bi sound)

Step 3 : Push **#** button (LED flickers on with Bi — sound)

Step 4 : Push 2nd New Code buttons
(4 digits min to 16 digits max, LED flickers on with Bi sound)

Step 5 : Push **#** button (Melodic tone)

EX) If a new code is decided 4 4 0 0, push buttons as follows.

M 2 # 4 4 0 0 # (Melodic tone)

▲ Caution : To confirm if the code is exactly entered, push the code in opening procedures prior to closing door.

For example, in case of your code 4 4 0 0, push button

C 4 4 0 0 #. If the procedure is properly done,

melody rings for three seconds.

★ How to erase the 2nd code? (Door opened, M > # > 2 > #)

Step 1 : Push **M** button on the door back
(LED flickers on with Bi sound)

Step 2 : Push **#** button (Bi sound)

Step 3 : Push **2** button (LED flickers with Bi sound)

Step 4 : Push **#** button (Bi — sound)

3. When to replace batteries ?

If door is not opened in spite of exact code entered (LED flickers with sound and melodic tone), it indicates that battery is not strong enough to actuate the solenoid. Then, four batteries should be replaced all together with new ones. (1.5V AAA Alkaline 4 pcs)

- The personal code is not erased even if battery is completely exhausted.
- Battery life span : 1 year (In case of three door openings a day)



1583-4 SONGJUNG-DONG GANGSEO-GU BUSAN, KOREA TEL (82 51) 831-4400 FAX (82 51) 831-4409
E mail : info@dsafe.co.kr www.dsafe.kr

• To improve products constantly, Diplomat Safe reserves the right to alter the specifications without prior notice.
Printed in Korea, Sep. 12, 2006 REV. 4